

Installation Guidelines - HC-4000 & HC-4000 Deluxe Hot & Cold Water Faucet - Free Standing Unit - Mounts to Any Surface

All units complete with: Shower Head, Shower Riser, Lever Handle
Hot/Cold Faucet, Adapters, Base Cover, Rubber
Grommet, Anchor Bolts

Optional Accessories: Hand Held Spray, Hose Bibb & Adapter, 6"
Sunflower Shower Head, Foot Shower

You will need:

- 9/16" wrench and crescent wrench
- Hammer
- Roto hammer with 3/8" drill bit
- Teflon Tape


1. Stand the unit at the desired location for installation.
2. Using the base plate as a guide, mark the placement of the drill holes.
3. Drill 3, 3/8" holes, 3" deep.
4. Place unit in position, lining up base plate holes with drilled holes.
5. Insert anchor bolts in holes with washer and nut at plate surface. (Additional stainless steel washers may be used under base plate if needed for leveling.)
6. When bolts are in place, and unit is leveled, hit the pin of the bolt with a hammer, locking it into place.
7. Tighten nuts.
8. Connect cold water supply to 1/2" flex hose connected to tee. (HOSE BIBB: Connect cold water supply to 12" flex hose connected to tee at base plate. Connect 30" flex hose extending from base to tee.)
9. Connect 30" flex hose extending from base to hot water supply.
10. Line up assembly parallel with shower unit and tighten union adapter to hot & cold valve.
11. Slide base cover over connections and base plate.
12. Attach riser to straight valve using Teflon tape.
13. Install shower head at end of shower riser using Teflon tape.
14. Connect Hand Held Sprayer & Hose to 3/8" coupling below hanger bracket.

It is very important to winterize outdoor showers. Just like water faucets and hose bibbs, they are susceptible to freeze damage. The unit(s) must be drained and/or valves removed in extreme freezing temperatures.

WARNING: FREEZE DAMAGE is NOT covered by the warranty.



If you need assistance installing your shower unit, or have questions, please contact us at
1-866-shower1 or
sales@poolshower.com

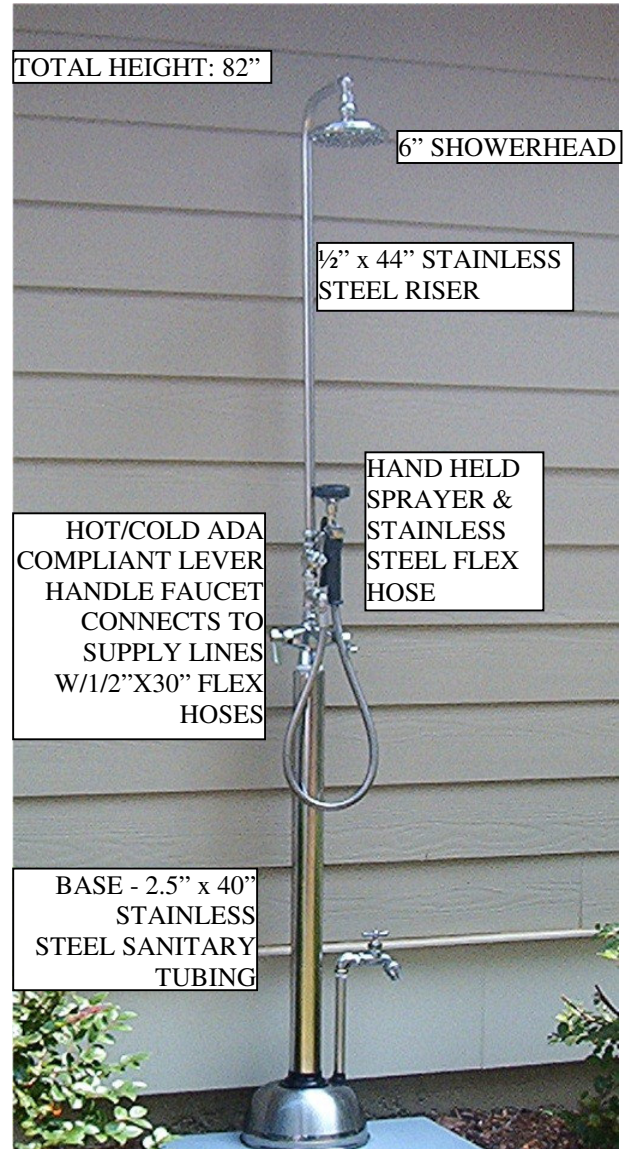

- 8" DIAMETER STAINLESS STEEL BASE COVER
- 1/2" NPT HOT & COLD WATER SUPPLY LINES
- 2" OPENING AT BASE
- 6" dia. STAINLESS STEEL BASE PLATE WITH ANCHOR BOLTS OR LAG SCREWS

